VP-x201-CE7 Quick Start

Version 1.0.0, February 2015

Supported Models

- **VP-2201-CE7**
- **VP-4201-CE7**

What's in the box?

In addition to this guide, the package includes the following items:

ViewPAC

A microSD card & a micro SD/SD adapter

Software Utility CD

Screw Driver

Panel Clip * 4

M4x30 L Screw *4

Technical Support

ViewPAC CE7 User Manual

CD:\VP-x201\Document\User_Manual\

http://ftp.icpdas.com/pub/cd/winpac_am335x/vp-x201/document/user_manual/

E-mail: service@icpdas.com

1 Mounting the Hardware

The ViewPAC can be mounted on a panel of maximum thickness 5 mm. Adequate access space can be available at the rear of the instrument panel for wiring and servicing purposes.

To ensure proper ventilation for your ViewPAC, leave a minimum of 50 mm space between the top and bottom edges of the ViewPAC and the enclosure panels.

Models	Depth
VP-2201-CE7	38.2 mm
VP-4201-CE7	44 mm

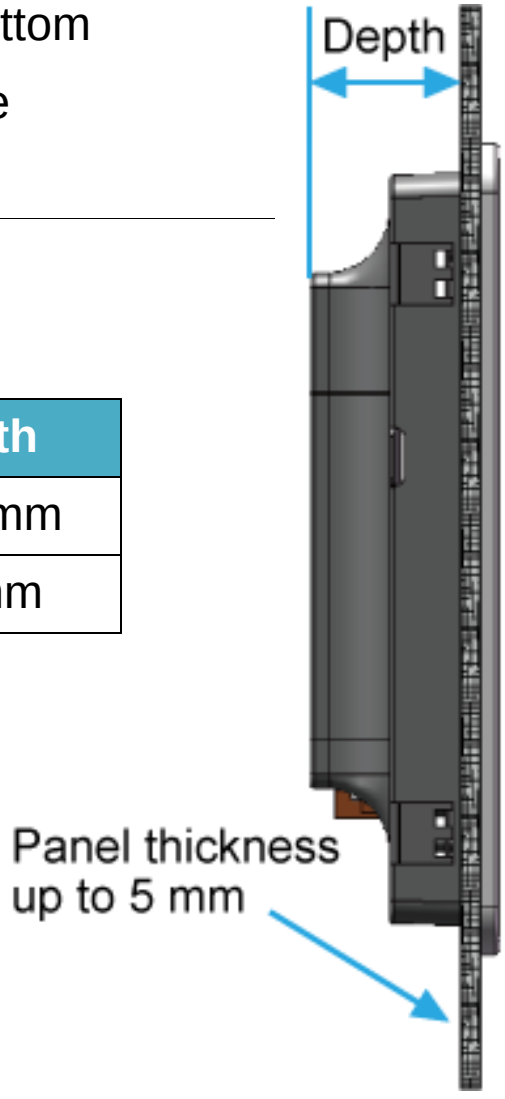

1) Prepare the panel and cut the hole to the specified size.

The table below shows the dimension of the panel cut-out of ViewPAC.

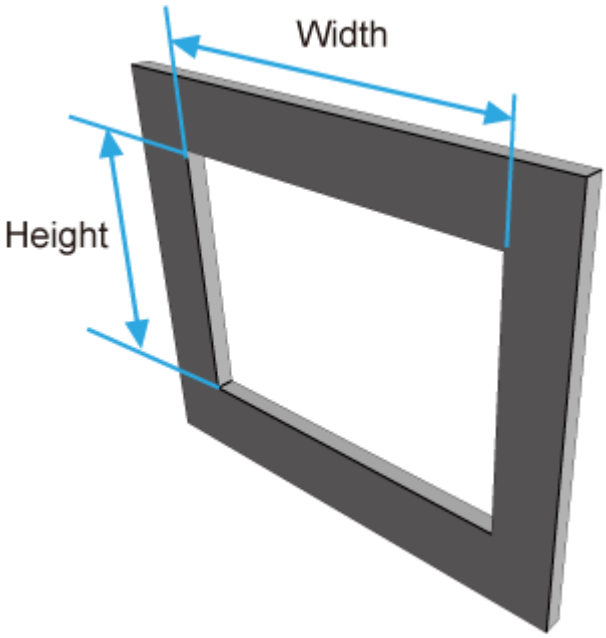

Models	Panel Cut-Out (Width x Height)
VP-2201-CE7	200 mm x 133 mm, ± 1 mm
VP-4201-CE7	276 mm x 214 mm, ± 1 mm

2) Attach the ViewPAC to the cut-out hole.

3) Insert the panel mounting clips into the upper and lower ventilation holes.

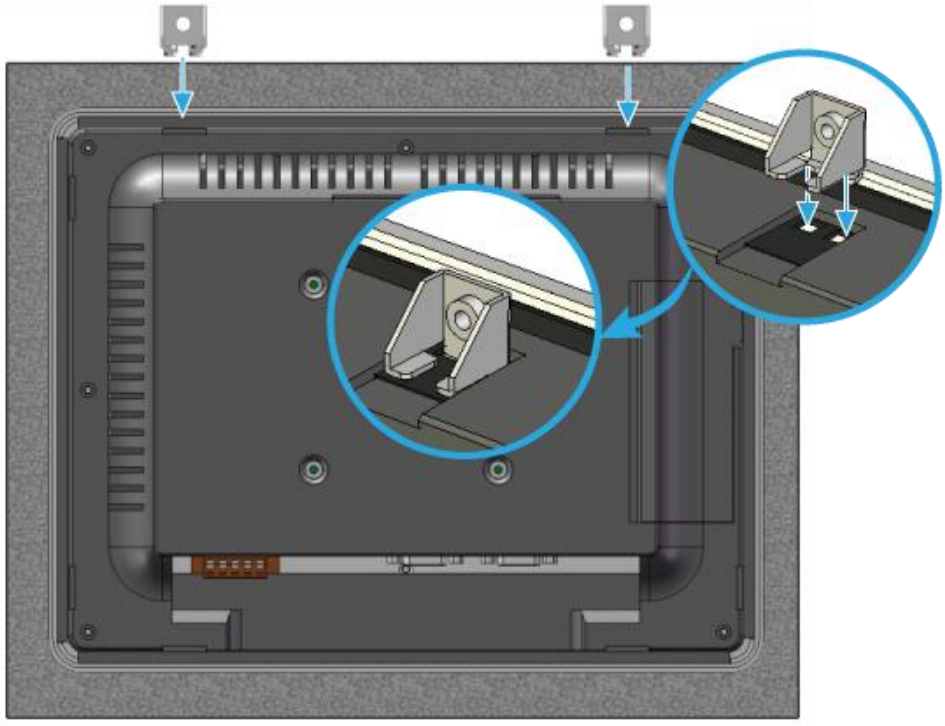

4) Screw the panel mounting clips to the panel.

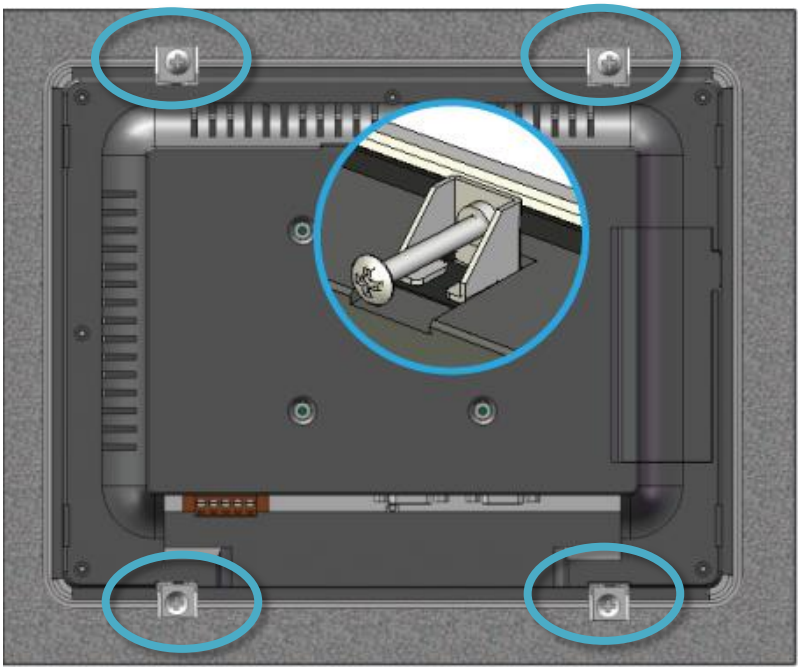

Recommended Screw Torque: 3.4 ~ 4.5 kgf-cm.

2 Setting up the ViewPAC

1) Connect the positive terminal (+) of the power supply to the terminal PWR and the negative terminal (-) of the power supply to the P.GND.

> The input range of power supply is +12 ~ +48 V_{DC}.

2) Connect the USB mouse or the USB keyboard to the USB port.

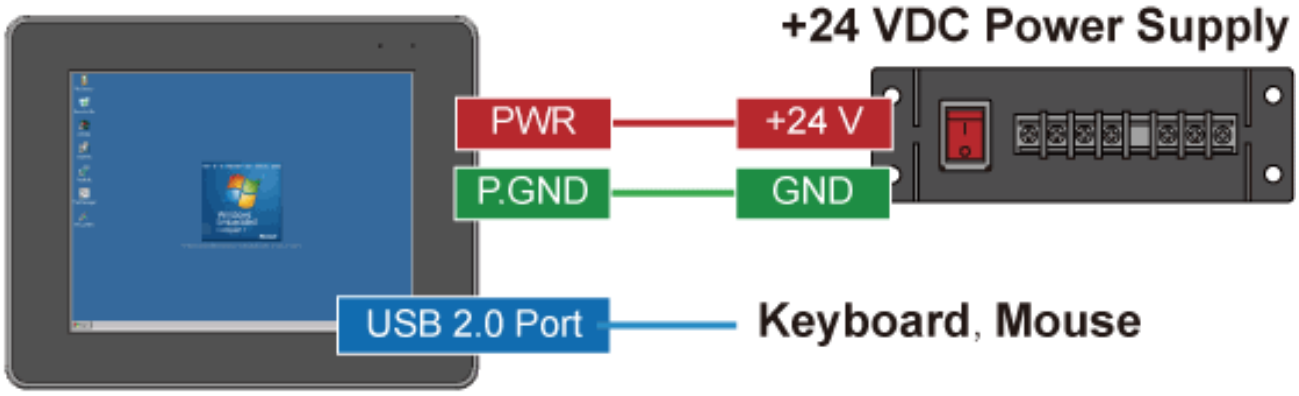

3) Turn on the ViewPAC.

3 Using PAC Utility to Manage the ViewPAC

The PAC Utility is a collection of the ViewPAC system tool that allows user quickly and easily manage and configure the ViewPAC.

1) Double-click the PAC Utility shortcut on the desktop

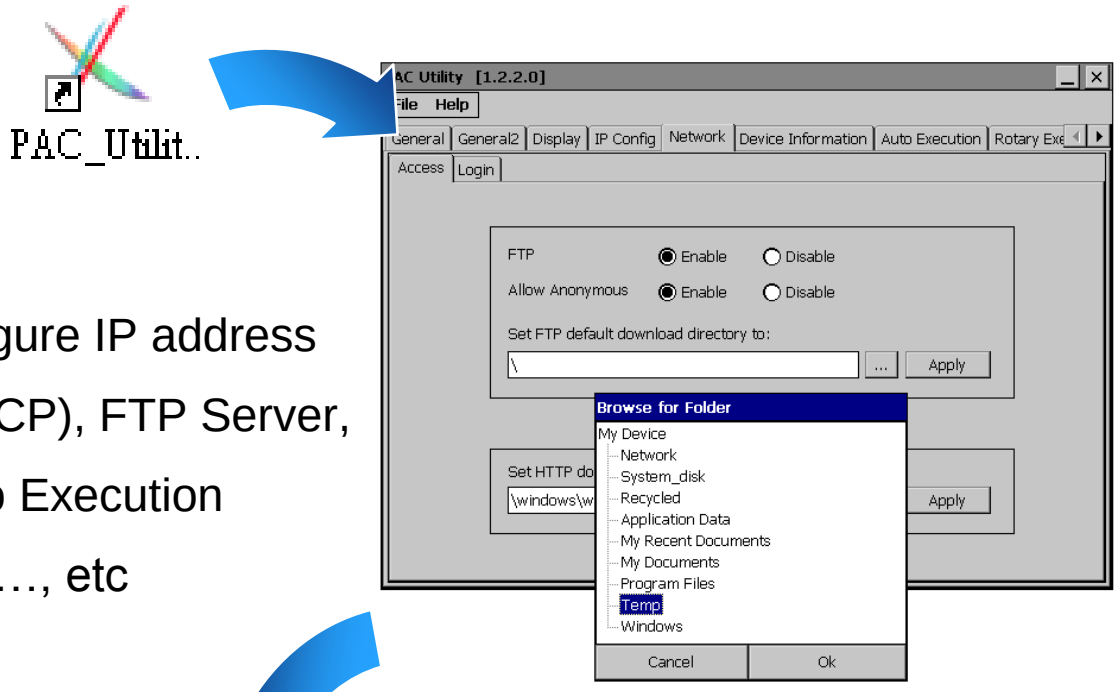

2) Configure IP address (DHCP), FTP Server, Auto Execution files…, etc

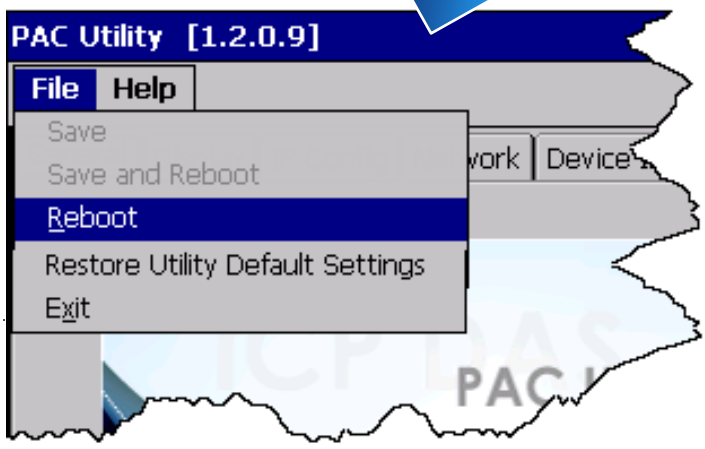

3) Reboot the ViewPAC for changes to take effect.

4 Changing the User Interface Language

The Regional Settings is a Windows Embedded Compact 7 functionality that allows users to easily change the ViewPAC user interface with your native language.

1) Click Start menu, point to Settings, click Control Panel, and then click the Regional Settings

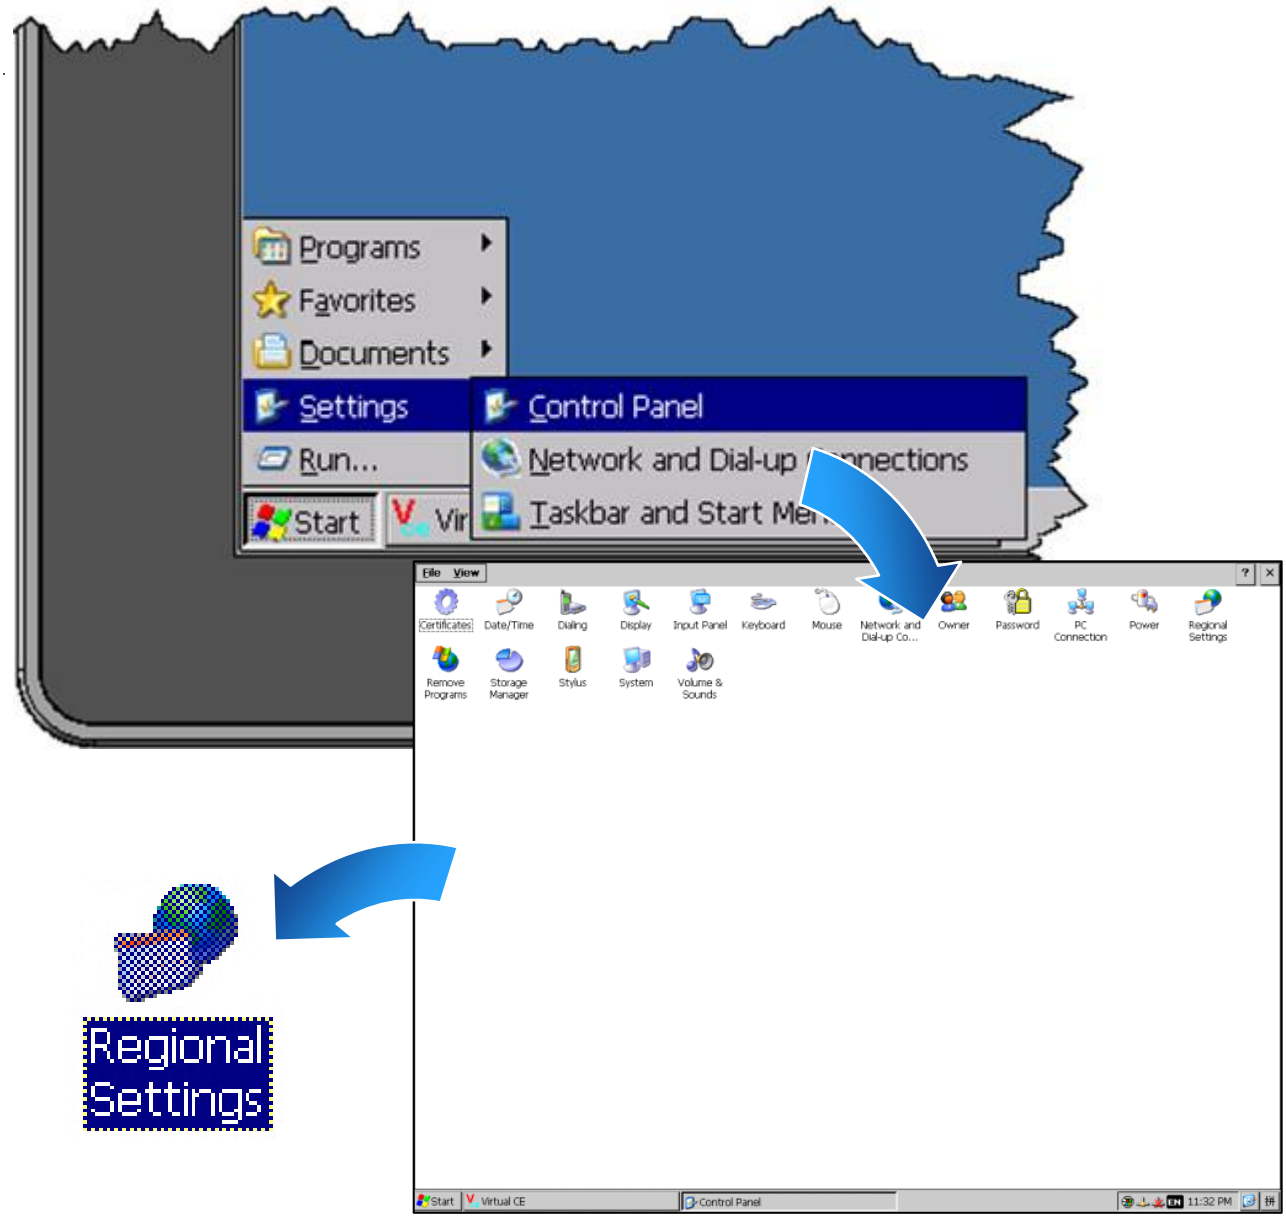

2) Click User Interface Language tab, choose to your local language, and then click OK.
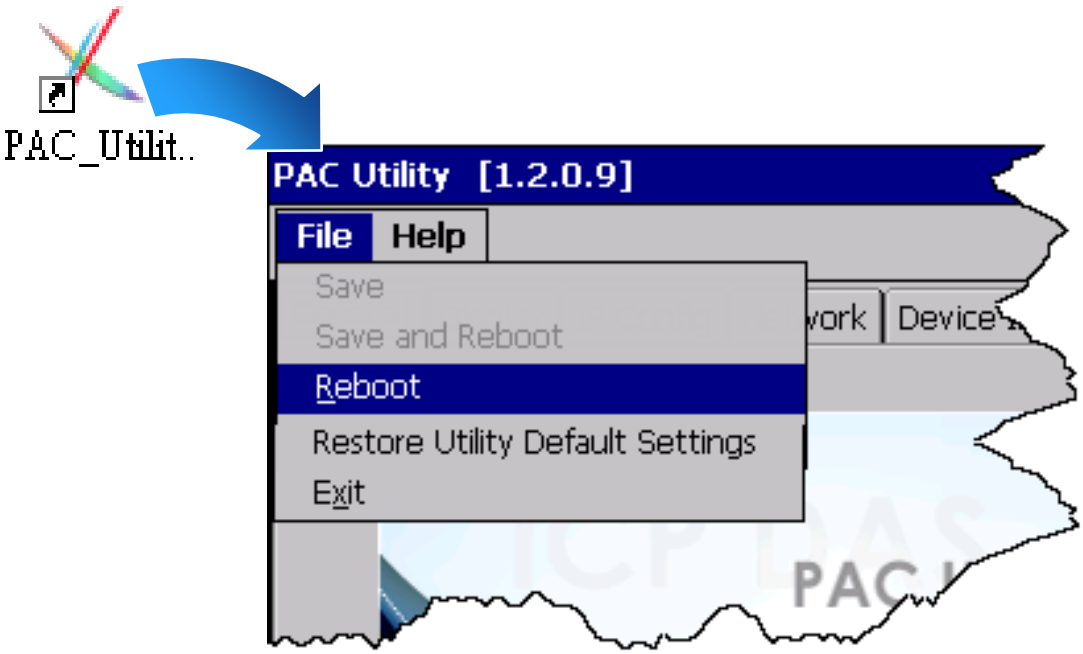
3) Run the PAC Utility, click Reboot for changes to take effect.